

Operating and Safety Instructions

EDGE SANDER

USES Sanding around the edges of timber flooring



PRE CHECK

Ensure dust bag/paper clamping disk key are with machine
Ensure of adequate sanding paper to complete the job
Electric extension lead is positioned safely
Ensure transformer or a residue current device (RCD) unit used.
Machine is switched off before plugging into mains power supply



STARTING

Grasp the hand grips and tilt the machine backwards, raising the sanding disc from the floor.
Switch on and let the motor build up speed.
Lower the sanding disc slowly on to the floor.



OPERATION

Work in a smooth motion from right to left. Do not push down let the weight of the machine do the work. Keep an eye on the papers. When papers become blocked change them.



STOPPING

Tilt machine off the floor
Switch off and allow disc to stop turning before placing machine back down



SAFETY PRECAUTIONS AND EQUIPMENT

Unplug machine from mains power supply when changing sanding disc
Always use dust bag and empty frequently
Never touch the sanding disc while power cord is plugged in
Keep power cords clear of area being worked
Don't wear loose clothing



HAZARDS

Faulty power leads
Loose clothing

Personal Protective Equipment

