


Aluminium Scaffolding

Operating and Safety Instructions

If you are collecting the equipment for someone else please make sure this sheet is given to the equipment user to read. In accordance with Health and Safety in Employment Act requirements, this sheet should be given to the site supervisor if the equipment is being hired for use at a commercial worksite so that the information is available to all users.

Required Safety Equipment

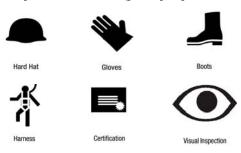



Pre Checks and Safety

- ! Scaffolding over 5 metres may only be erected, altered or dismantled by a person who holds an appropriate "Certificate Of Competency" issued under the scaffold regulations
- ! Stabilizers must be used on any structure higher than 3 metres
- ! All scaffolding more than 3 metres in height must have guard rails and toe boards fitted
- ! Check that each component is in good working condition
- ! Never use damaged frames or equipment
- ! Ensure you use the correct safety equipment for the work being performed
- ! Tools and appliances can be knocked off the platform, always use toe boards supplied
- ! Beware of overhead power lines and call your local electricity supplier if you need power turned off
- ! Beware of high wind conditions

When Operating

- Do not adjust the legs with personnel or materials on the scaffold tower
- Do not overload
- Do not move scaffold structure while people are on the tower
- If the structure has been moved recheck all leg adjusters and stabilizers and relock the castors

Assembly

- Assemble as per the instructions sheet given at time of hiring
- Ensure tower is level during use using the leg adjustment provided and each castor wheel (if fitted) locked
- Ensure that all frames and braces etc are fully locked into position

Dismantling

- Dismantle in the reverse order of assembly
- Take care not to damage components