

Operating and Safety Instructions

INFRARED OIL HEATER

USES Heating/Drying



PRE CHECK

Fuel tank is full (Diesel fuel)
When transporting ensure machine is well secured down as damage may be caused to the conical insulator inside



STARTING

Plug machine into the power supply
Switch on machine (Note: Abnormal noise will fade in 20 - 30 seconds)
If machine doesn't fire in 30 seconds, misfire lamp will be on and operation will be stopped.
Switch off, then switch on again, if necessary, repeat till ignition starts.



OPERATION

Do not place heater too close to flammable materials, or where dust can be stirred such as wood dust etc. Place heater at a minimum distance of 3m from obstructions. To be used in the floor or ground only. Position in a well ventilated area to supply a sufficient supply of oxygen for perfect combustion.



STOPPING

Switch off machine. Do not pull out plug from power supply before the fan stops and the operation light goes off. (cool down period approx 3 min)



SAFETY PRECAUTIONS AND EQUIPMENT

Do not place machine in the area of explosives or easily flammable materials
Do not refuel machine while it is running
Do not position machine too close to human traffic
Guard off area to be used in to prohibit people from getting too close



HAZARDS

Machine will become very hot - Do Not Touch